

OPERATING INSTRUCTIONS MODELS XR500/XR500N/XR500E/XR500FC/XR500NFC XR100/XR100N/XR100FC/XR100NFC

NORMAL STANDBY CONDITION

When the system is in the normal standby condition, the keypad shows either the time of day or a blank display.

ALARM CONDITION

When the system is in an alarm condition, the keypad display shows the violated zone name(s) followed by an alarm display.

ALARM SILENCE

To silence the alarm while the bell or siren is sounding, enter your code number and press the **COMMAND** key. This silences the alarm but does *not* cancel any alarm reports to the central station.

RESETTING DETECTORS

To reset a smoke or other detector, enter the User Menu by pressing the **COMMAND** key until **MENU? NO YES** appears in the display. Press the top row key under **YES**. The display shows **ENTER CODE: -**. Enter your code number and press **COMMAND**. The keypad display now shows **ALARM SILENCE?** if your code allows. Press the **COMMAND** key until **SENSOR RESET?** appears in the display. Press any top row key.

TROUBLE CONDITION

When a device is in a trouble condition, the keypad tones and displays the zone or device name followed by **TRBL**. Press any top row key to silence.

SYSTEM TESTING

You should test the security system weekly to ensure proper operation. You can do this through a function in the User Menu. After entering the User Menu, press the **COMMAND** key until **SYSTEM TEST?** displays. Press the left most top row Select key. The system bell, battery, and communication to the central station receiver system is then tested.

ALARM SERVICE

If service is required for this system, please contact:

Company _____

Address _____

Telephone _____

The operating instructions above should be attached to the front, or framed and located adjacent to, the panel or a Security Command keypad with an alphanumeric display.

