

E3 EXPANDABLE EMERGENCY EVACUATION SYSTEM

THIS SYSTEM MUST BE TESTED REGULARLY IN ACCORDANCE WITH THE APPLICABLE FIRE CODES. CONSULT YOUR FIRE MARSHAL IN CASE OF DOUBT.

NORMAL CONDITION:

The green "AC POWER ON" light is lit. The time is displayed on the panel display. All other lights and sounding devices are off.

ALARM CONDITION:

The red "ALARM" light is flashing, the display identifies the source of the alarm, the alarm signals are sounding, strobes are flashing and the panel sounding device is pulsing.
FOLLOW PROPER EMERGENCY PROCEDURES FOR NOTIFYING THE FIRE DEPT., EVACUATING THE BUILDING, ETC.

To acknowledge the alarm condition:

- Insert the key activating the control cluster and press the "ALARM ACKNOWLEDGE" switch once. This will cause the system alarm light and display to stay on steadily and silence the panel sounding device.
- NOTE: MULTIPLE ALARM INDICATIONS MUST BE ACKNOWLEDGED INDIVIDUALLY. ALARMS WILL SCROLL. THE FIRST ALARM WILL BE INDICATED ON THE DISPLAY.

When told by an authorized person there is no hazard and it is safe to do so, you may silence the audible alarm signals:

- Press the "SIGNAL SILENCE" switch once. This will light the yellow "SYSTEM SILENCED" light. The "NAC 1 SILENCED" and "NAC 2 SILENCED" lights may also light.

After an alarm condition, immediately notify Authorized Personnel.

When authorized to do so, the system can be reset by pressing the "SYSTEM RESET/LAMP TEST" switch. (Hold this switch down for at least four (4) seconds). Note that all initiating devices must be restored to normal first, or the system will not reset.

SUPERVISORY CONDITION:

Yellow "SUPERVISORY" light is flashing. The panel audible signal will sound and the display will indicate a supervisory message.

1. NOTIFY AUTHORIZED PERSONNEL IMMEDIATELY.

2. When told by an authorized person it is safe to do so, then:

- Insert the key activating the control cluster and press the "TROUBLE ACKNOWLEDGE" switch. This will cause the "SUPERVISORY" light and display to stay on steady and will silence the panel audible signal.
- When the cause of the condition has been corrected, the system can be reset by pressing the "SYSTEM RESET/LAMP TEST" switch. (Hold this switch down for at least four (4) seconds). Note that all initiating devices must be restored to normal first, or the system will not reset.

TROUBLE CONDITION:

Yellow "SYSTEM TROUBLE" light is lit. (Depending on the trouble condition(s), other fault lights may also be lit). The panel sounding device will sound and the display will indicate a description of the fault .

1. NOTIFY AUTHORIZED PERSONNEL IMMEDIATELY. DO NOT LEAVE THE PANEL IN A TROUBLE CONDITION. THE FIRE ALARM MAY NOT WORK PROPERLY. LIVES MAY BE LOST IN A FIRE. IF THE FIRE ALARM SYSTEM IS NOT OPERATING PROPERLY, IT MAY BE UNABLE TO PERFORM ITS INTENDED FUNCTION.

2. To acknowledge the trouble condition and silence the panel sounding device:

- Insert the key activating the control cluster and press the "TROUBLE ACKNOWLEDGE" switch.

NOTE: MULTIPLE TROUBLE INDICATIONS MUST BE ACKNOWLEDGED INDIVIDUALLY.

3. The yellow "SYSTEM TROUBLE" light and the display will remain lit until the trouble condition(s) has been corrected.

4. When the trouble condition(s) has been corrected, the system will return to the normal condition.

FUSE REPLACEMENT: There are no replaceable fuses in this panel.

BATTERY REPLACEMENT: Replace after three years. See Installation/Operating Manual, P/N 9000-0574.

TEST AND MAINTENANCE: See Installation/Operating Manual, P/N 9000-0574.

NOTE: THIS EQUIPMENT IS TO BE SERVICED ONLY BY QUALIFIED PERSONNEL. FOR SERVICE CALL: _____

CAUTION: QUALIFIED SERVICE PERSONNEL MUST DISCONNECT THE MAIN AC PRIOR TO SERVICING OR ELECTRIC SHOCK MAY RESULT. THE AC DISCONNECT IS LOCATED AT: _____

MOUNT THESE INSTRUCTIONS ADJACENT TO THE CONTROL SYSTEM IN A FRAMED ENCLOSURE.